REFATEK SYSTEMS INC.

WRANGLER FIELD CASE

QUICK START GUIDE

WRANGLER FIELD CASE

FEATURES

- IP67
- Dustproof
- Shockproof
- External Accessible Ports
- Accessory Storage & Transport

WRANGLER USER GUIDE

IMPORTANT

- Note difference between **deployed** and **transport** configurations. (For configurations see reverse)
- Ensure connectors are installed to correct ports. (Paticular attention should be paid to channel connectors)
- Do not store solar panel inside field case in deployed configuration

CONNECTOR LAYOUT

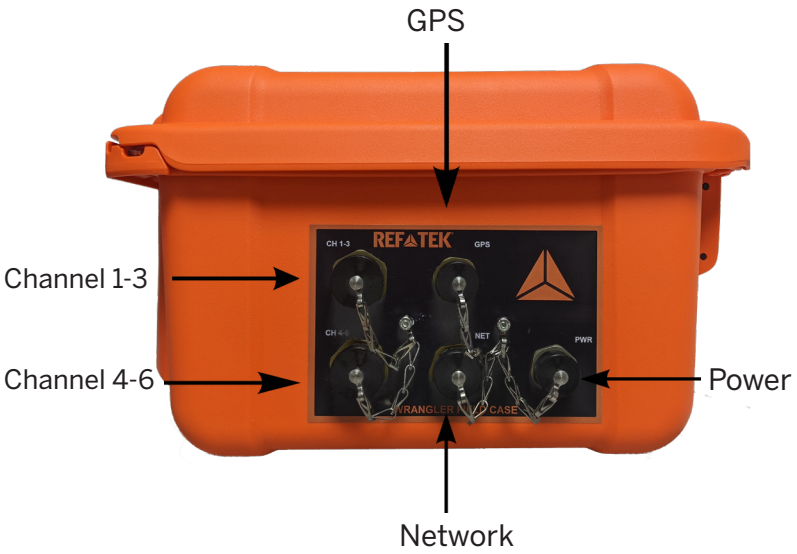

REFATEK SYSTEMS INC.
75 MacDonald Ave, Unit 1
Dartmouth, Nova Scotia, Canada
B3B 1T8
902-444-0539

HIGH RESOLUTION SEISMIC RECORDERS, SENSORS & SOFTWARE

TRANSPORT CONFIGURATION

» Straps on the lid for storing solar panel

» Straps utilized in cross pattern as shown

DEPLOYED CONFIGURATION

» Solar panel must be removed if cables are connected to Wrangler

» If using internal power do not connect external power cable to case.

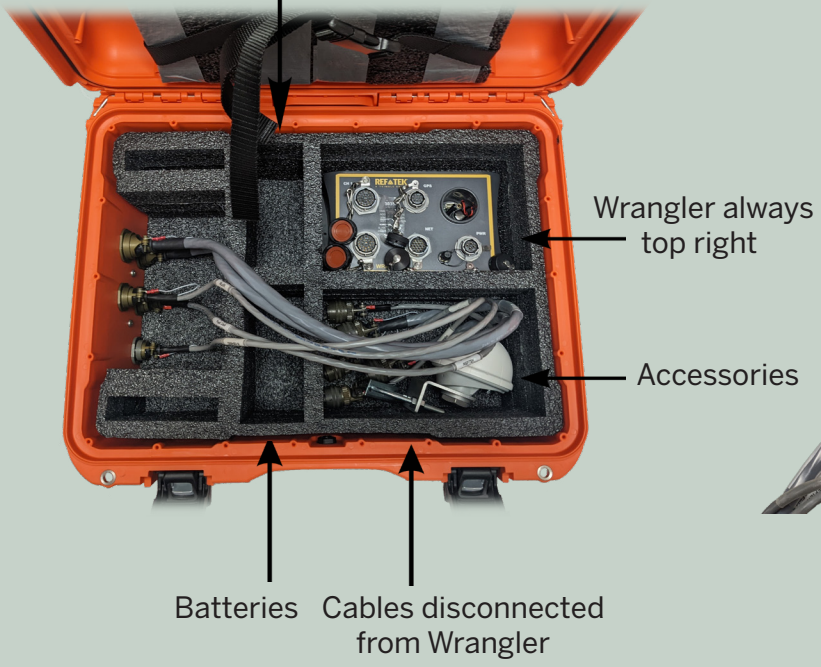

» Connect sensor and other desired connectors to external connectors.